


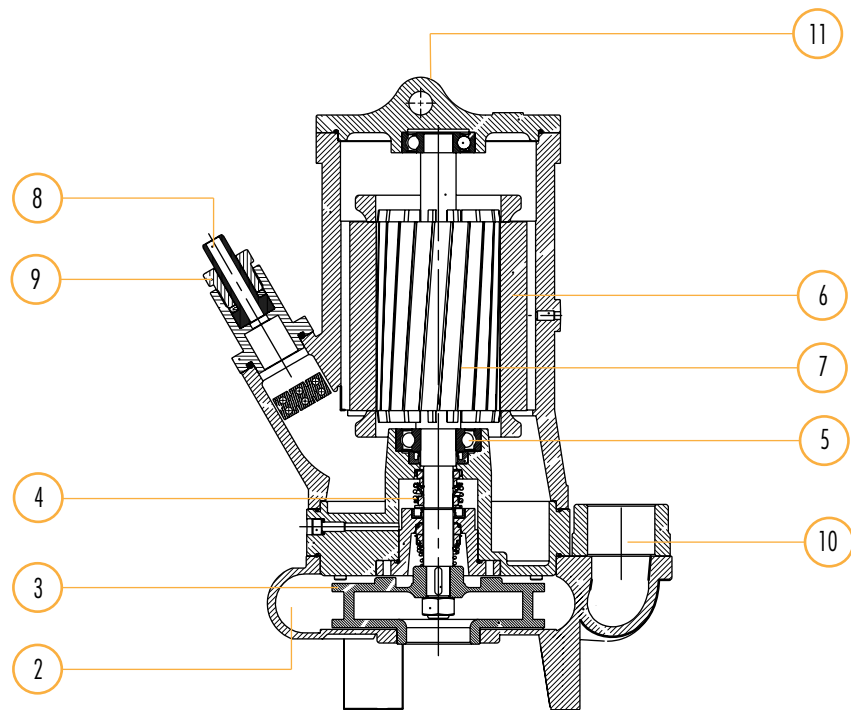

SECTIONAL VIEW



Part List

Volute	2
Impeller	3
Mechanical Seal	4
Bearing	5
Stator	6
Rotor	7
Cable	8
Gasket Connection Cover	9
Discharge Flange	10
Top cover	11

