


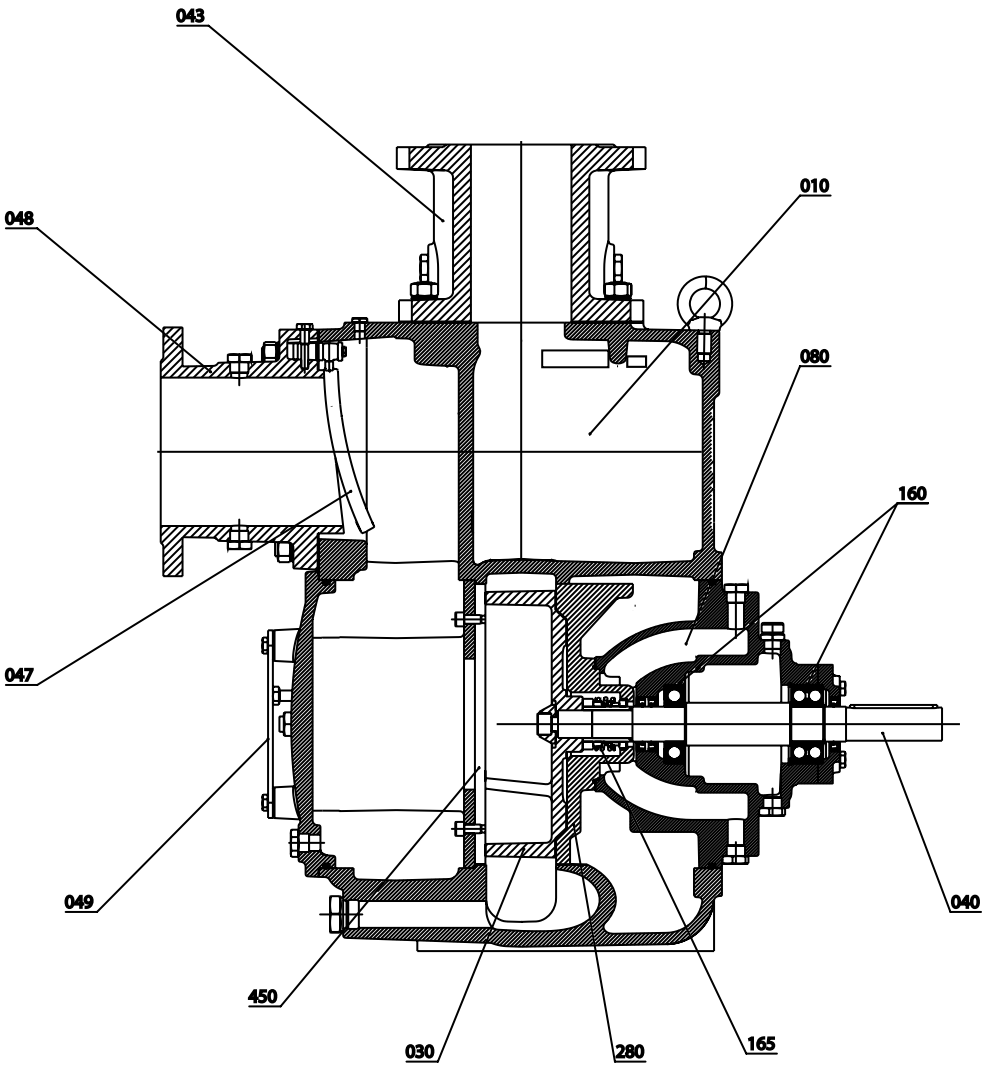

SECTIONAL VIEW

FK-KE 4x4 6x6 8x8



Part List


Shaft	040
Mechanical Seal	165
Impeller	030
Wear Plate	450
Cover Carrying Plate	049
Flap	047
Suction Flange	048
Discharge Flange	043
Volute Casing	010
Bearing Housing	080
Bearing	160





SECTIONAL VIEW

FK-KE 10x10

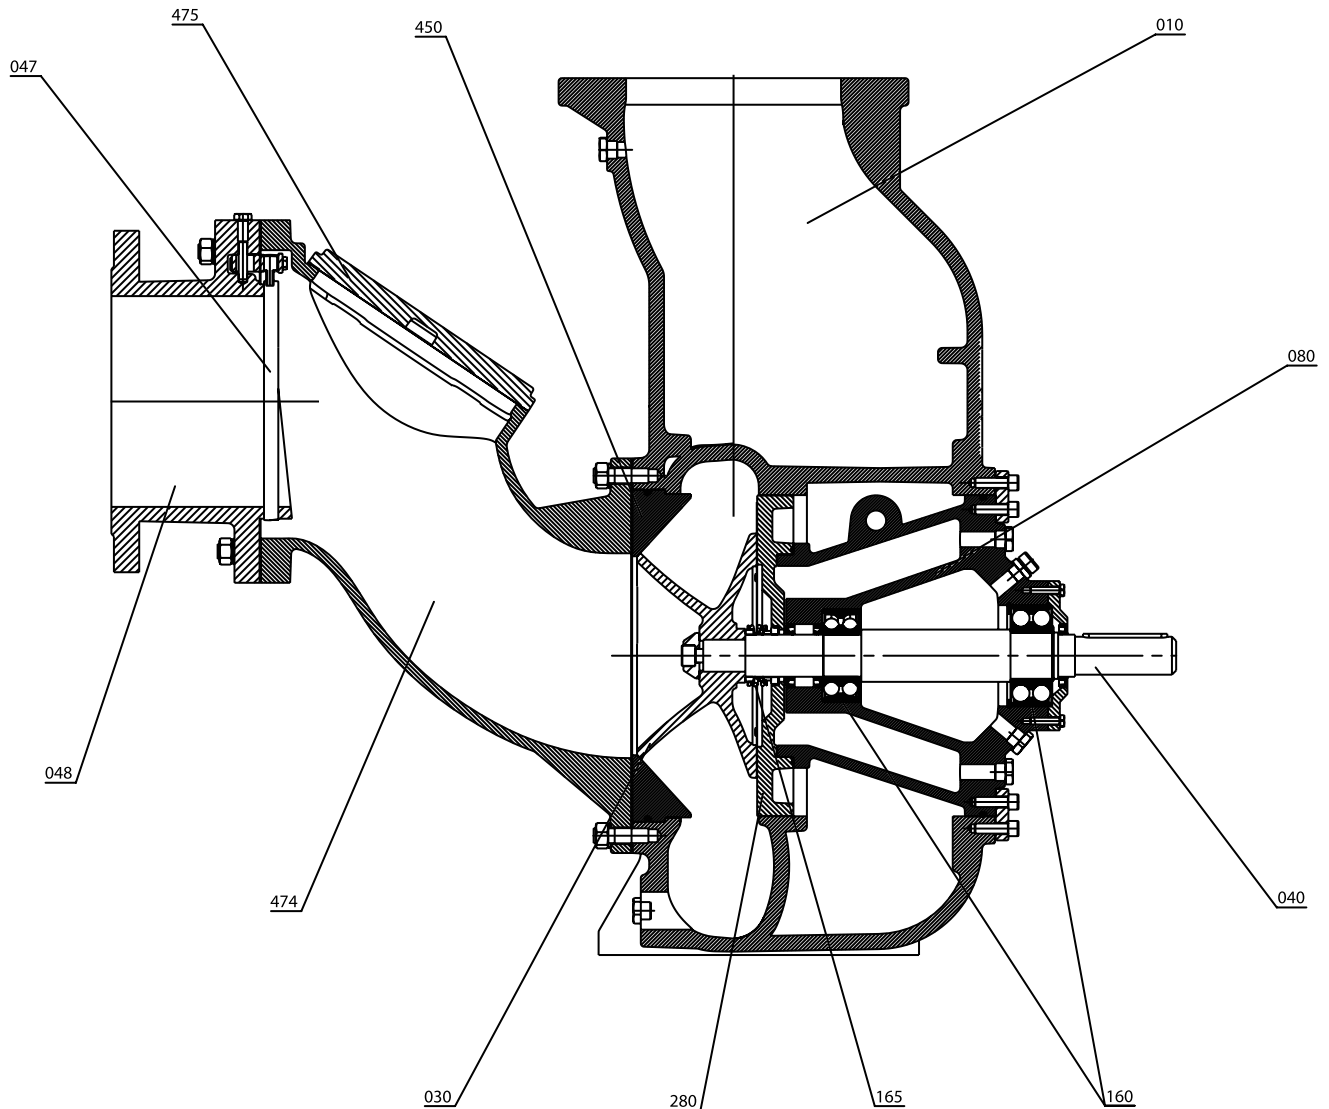

Part List

Shaft	040
Mechanical Seal	165
Stuffing Box	280
Impeller	030
Wear Plate	450
Flap	047
Suction Flange	048
Inlet Elbow	474
Inlet Elbow Cover	475
Volute Casing	010
Bearing Housing	080
Bearing	160

