


SECTIONAL VIEW

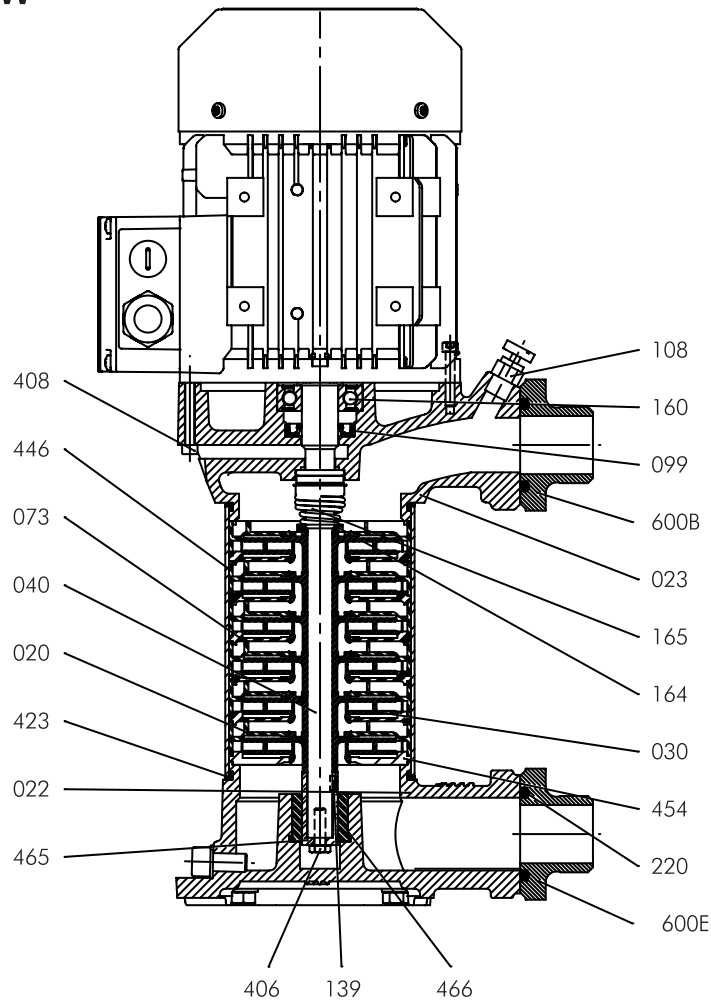


Part List

Discharge Casing	023
Shaft	040
Bearing	160
Stage cover	073
Diffuser	020
Impeller	030
Suction Bearing Housing	465
Suction Cover	454
Packing Housing	164
Oil Seal	099
Packing	165
Pin	139
Bolt	406
Imbus Bolt	408
Suction Casing	022
Suction Bed	466
Suction Flange	600 E
Discharge Flange	600 B
Trunk Pipe	446
Body Gasket	423
O-ring	220
Air Vent	108





SECTIONAL VIEW

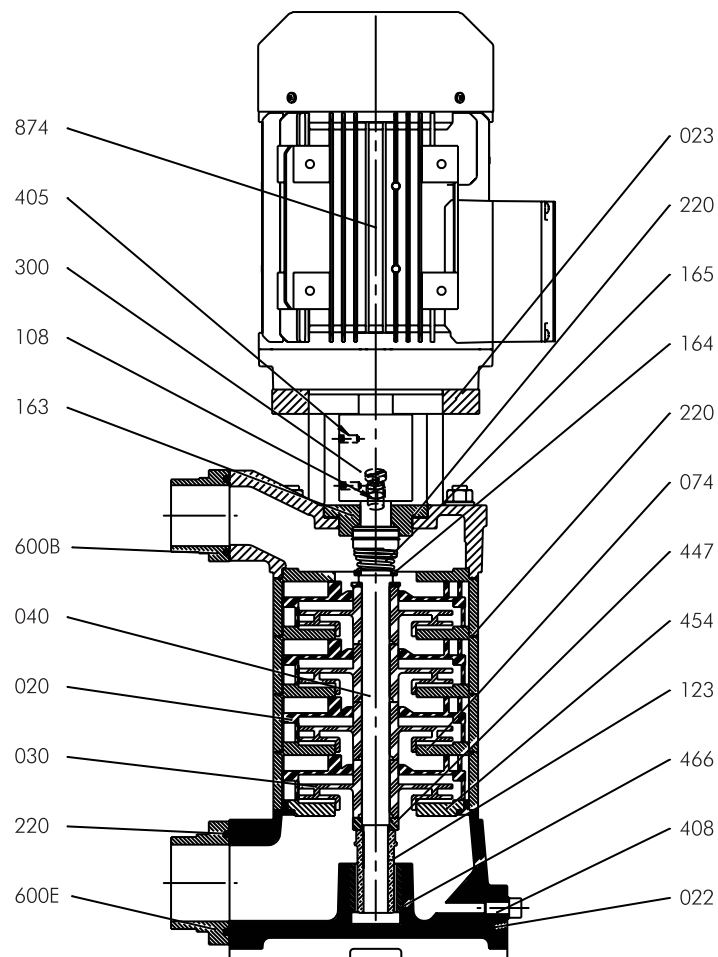


Part List

Suction Casing	022
Discharge Casing	023
Impeller	030
Diffuser	020
Level	074
Suction Cover	454
Suction Bearing	123
Mechanical Seal Cover	163
Shaft	040
Shaft Housing	447
Packing Housing	164
Packing	165
O-ring	220
Suction Bed	466
Motor	874
Suction Flange	600 E
Discharge Flange	600 B
Air Vent	108
Imbus Bolt	408
Grub Screw	405
Coupling	300





SECTIONAL VIEW

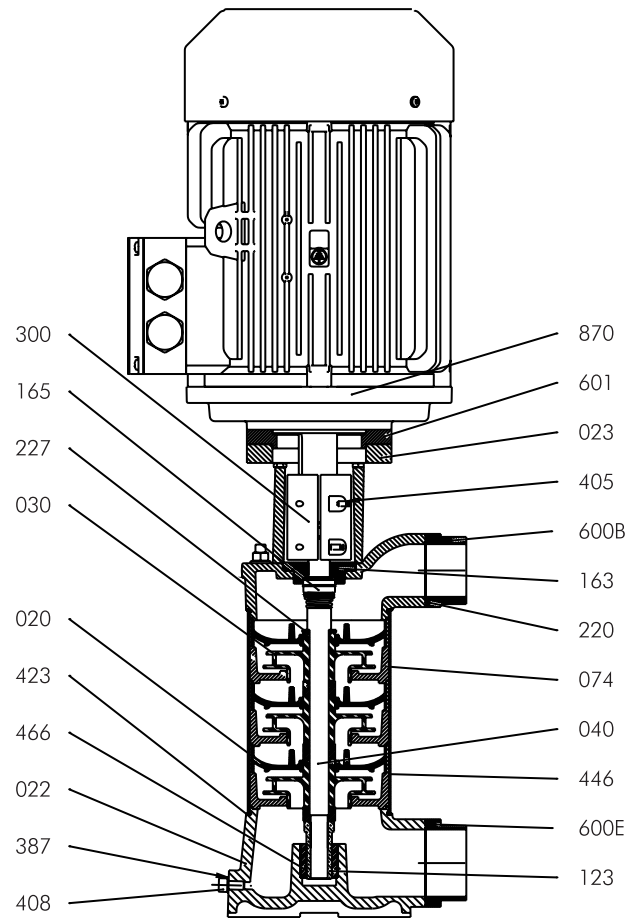

Part List

Suction Casing	022
Suction Bed	466
Level	074
diffuser	020
Impeller	030
Suction Bearing	123
Shaft	040
Discharge Casing	023
Mechanical Seal Cover	163
Motor Housing	601
Coupling	300
Mechanical Seal	165
Motor	870
Grub Screw	405
O-ring	220
Discharge Flange	600 B
Suction Flange	600 E
Body Gasket	423
Trunk Pipe	446
Copper Washer	387
Imbus Bolt	408

