



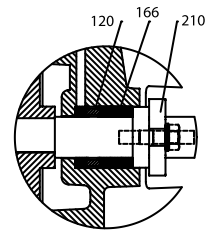

SECTIONAL VIEW

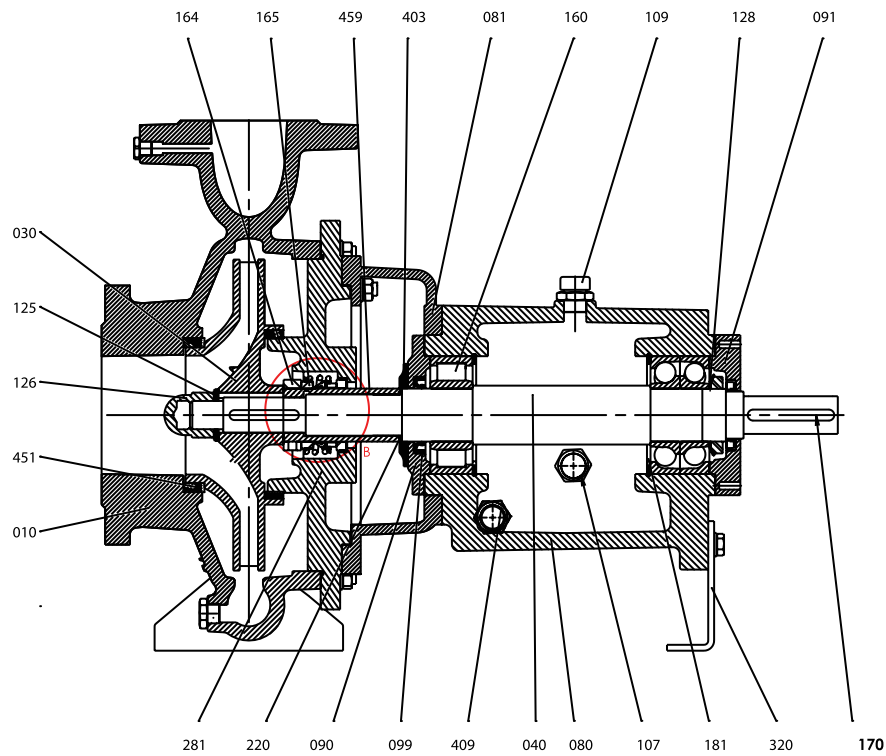

Soft Packing Application




Part List

Volute Casing	010
Impeller	030
Shaft	040
Bearing Housing	080
Interconnection Part	081
Bearing Cover (Inside)	090
Bearing Cover (Outside)	091
Oil Seal	099
Oil Level Indicator	107
Air Bleed Plug	109
Flushing Ring	120
Distance Ring	125
Closed End Nut	126
Safety Sheet	128
Bearing	160
Mechanical Seal Setting Sleeve	164
Mechanical Seal	165
Soft Packing	166
Key	170
Piston Ring	181
Connection Support	210
O-Ring	220
Seal Box	281
Supporting Feet	320
Throw Protection	403
Drain Plug	409
Wear Ring	451
Shaft Sleeve	459



SEMI OPEN IMPELLER APPLICATION

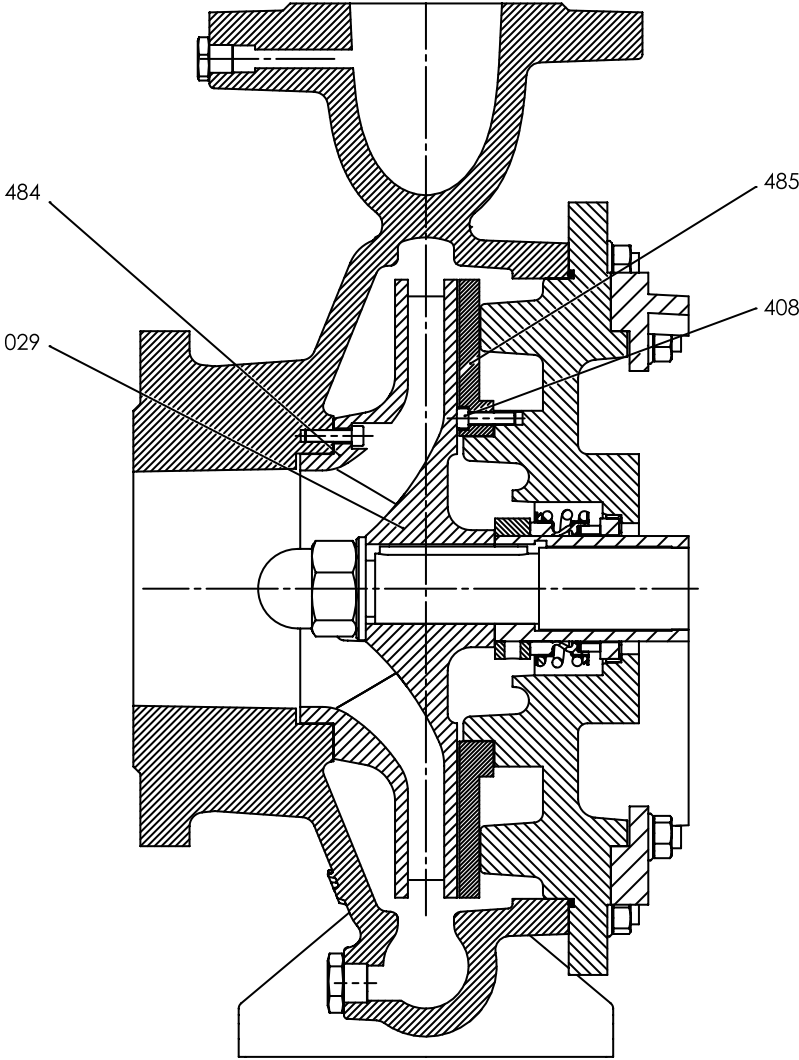

Part List

Impeller	029
Bolt	408
Front Wear Plate	484
Rear Wear Plate	485